

JUNG

product presentation



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



SPATHARAS ALEXANDROS COMPANY

We offer the answer for every lifting demand!

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

Used equipment: Import, export and trade of cranes and heavy equipment worldwide

JUNG: Lifting and transport equipment

Bare lease of new and used equipment

Service on site: Repair and maintenance

Spare parts



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu


41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

Where are JUNG products used?

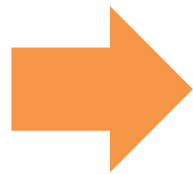

Wherever heavy things
need to be moved.



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Heavy duty transport

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Heavy duty transport

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Moving of processing equipment

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu


41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T: +30 2310 709155
F: +30 2310 709 989
E: info@spatharas.eu



Moving of processing equipment

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

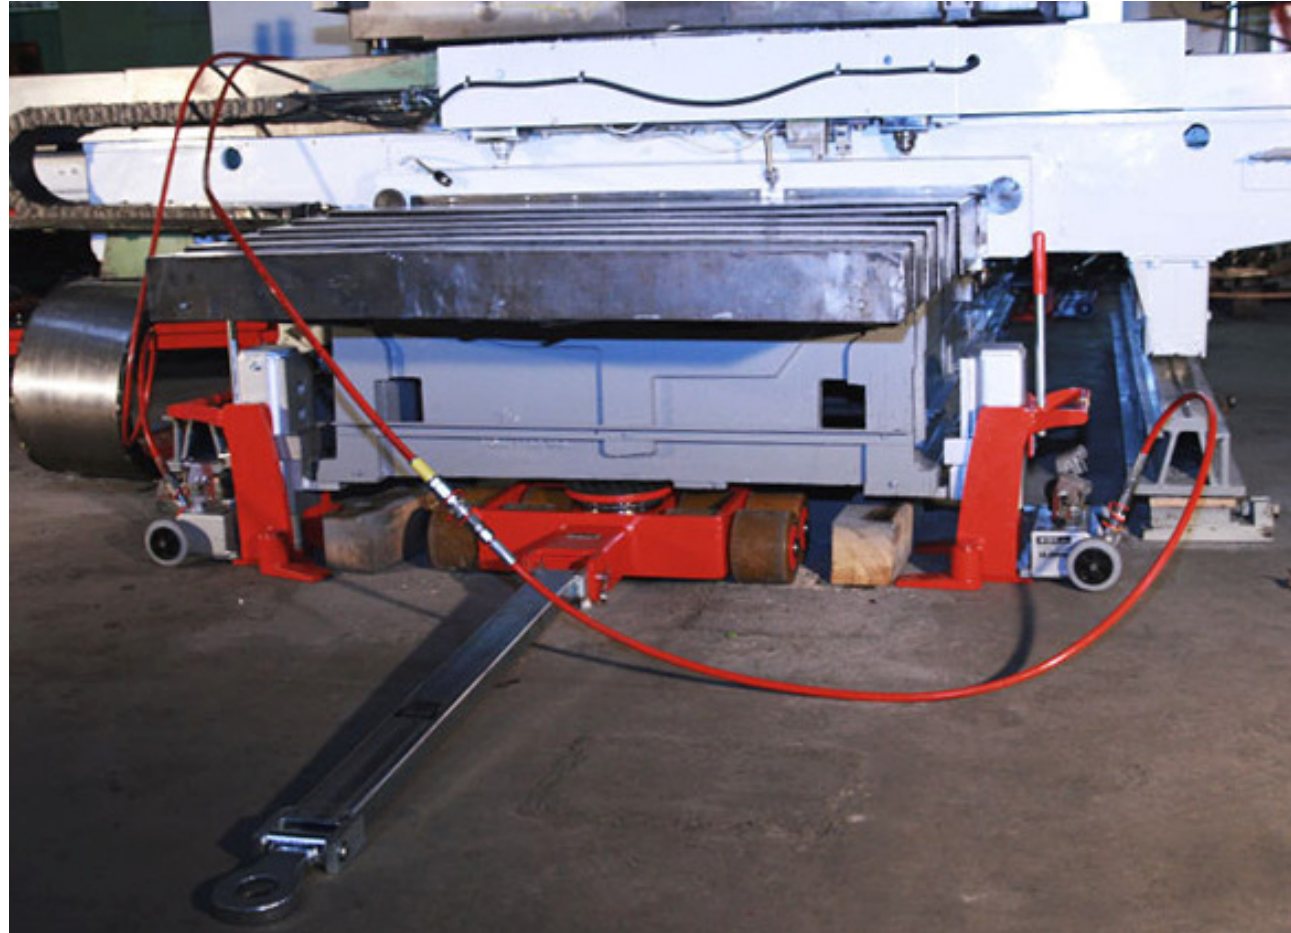

Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Moving of processing equipment

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Relocation of entire production lines

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Special applications

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu


41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Special applications

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

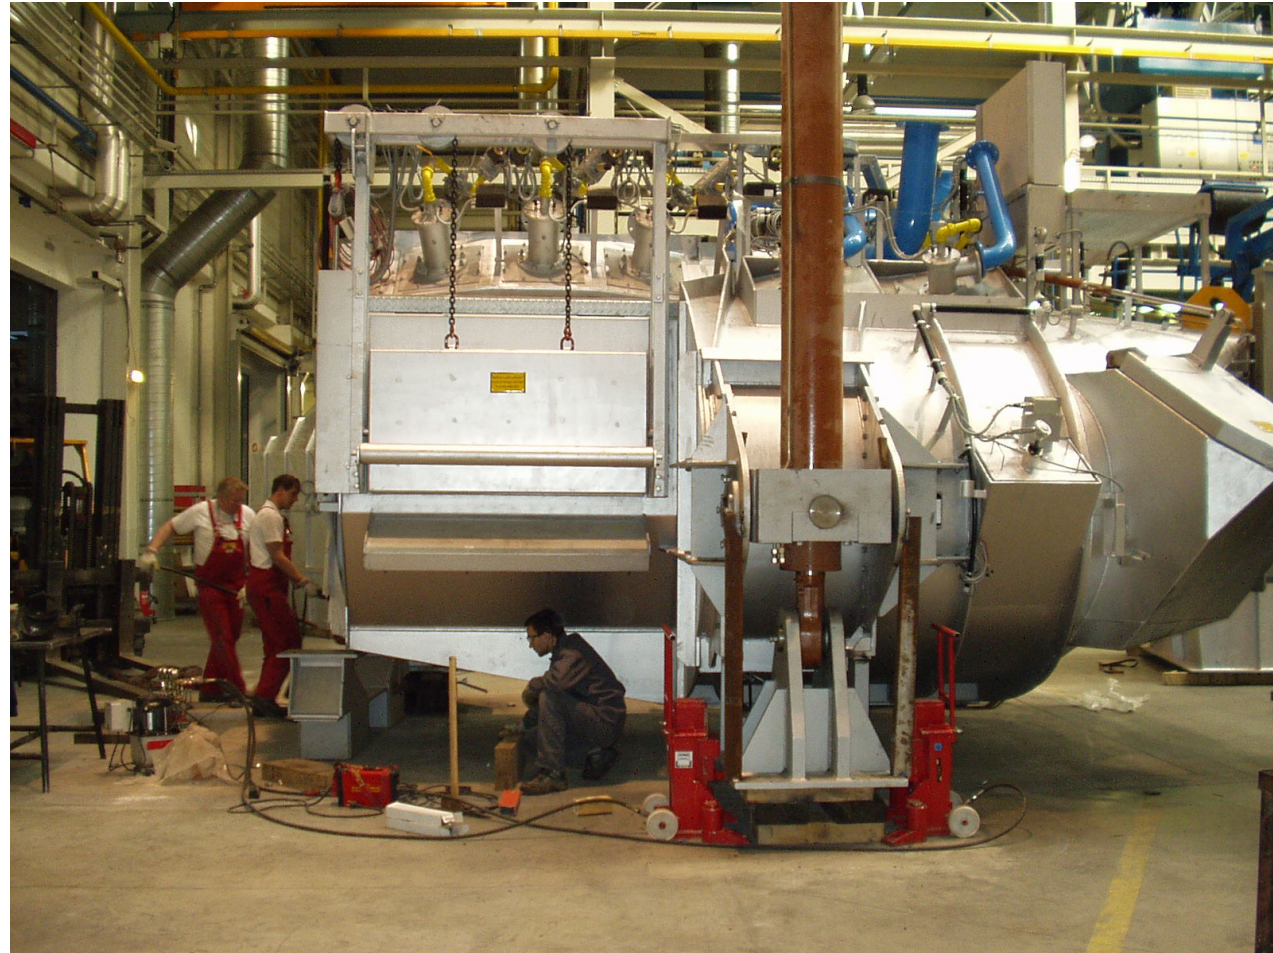

Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu


41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Product Catalog

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

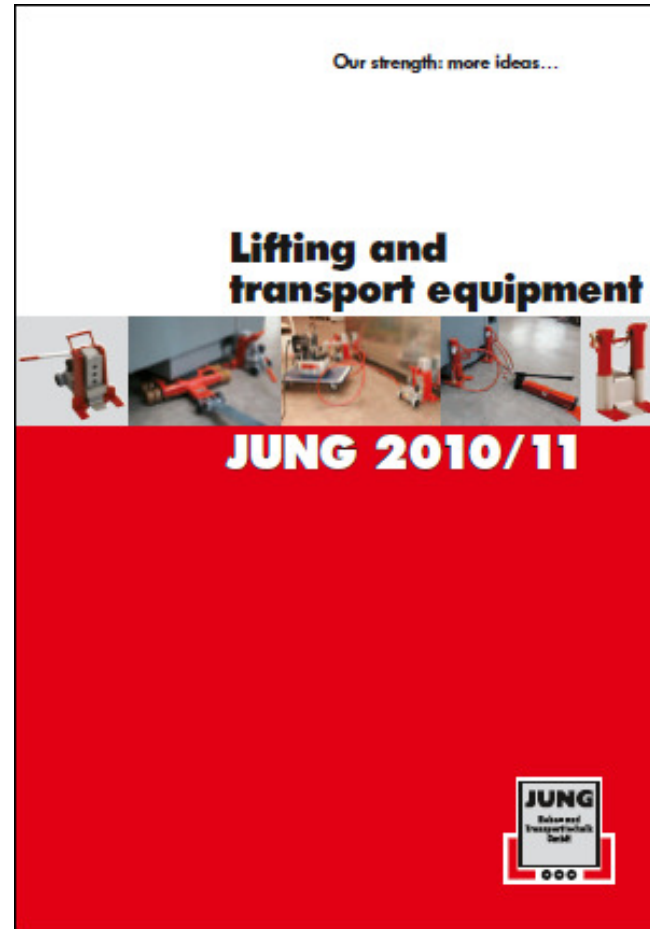

Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Product Catalog

- Company info
- JUNG, Where?
- **Product catalog**
 - Jacks
 - Trolleys
- How to use

Products name codes:

J=JUNG

H=Jacks

P=Pumps

L=Steerable Trolley

F=Adjustable Trolley

T=Tandem Trolley

K=Revolving Trolley

B=Bended construction

P K S G H= Series

Example: JFB 30 G= JUNG Adjustable trolley, 30 tons, G series

JH 13 P= JUNG Jack 13 tons, P series



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu


41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



JACKS

G plus series
(5t, 10t, 15t, 20t)

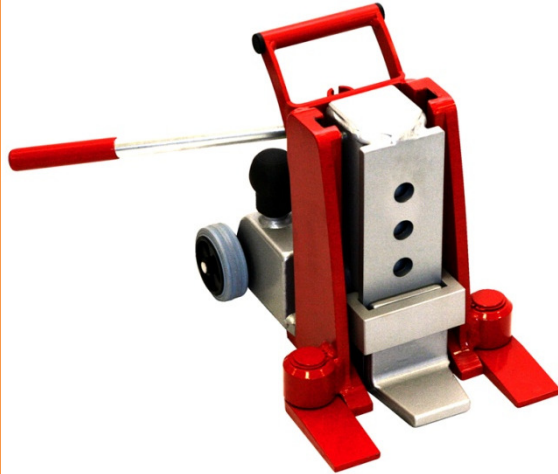

S series
(5t, 10 t)



P series
(13t, 30t, 50t)



- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

G Series

Double use of
pumping handle




Removable handle
for lifting loads on
the top plate


Ergonomic
lowering screw

Different starting
positions

6° Swiveling feet for
perfect balance

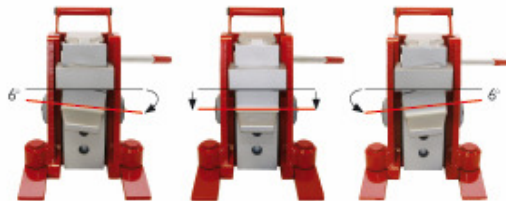

Turnable feet for
save positioning

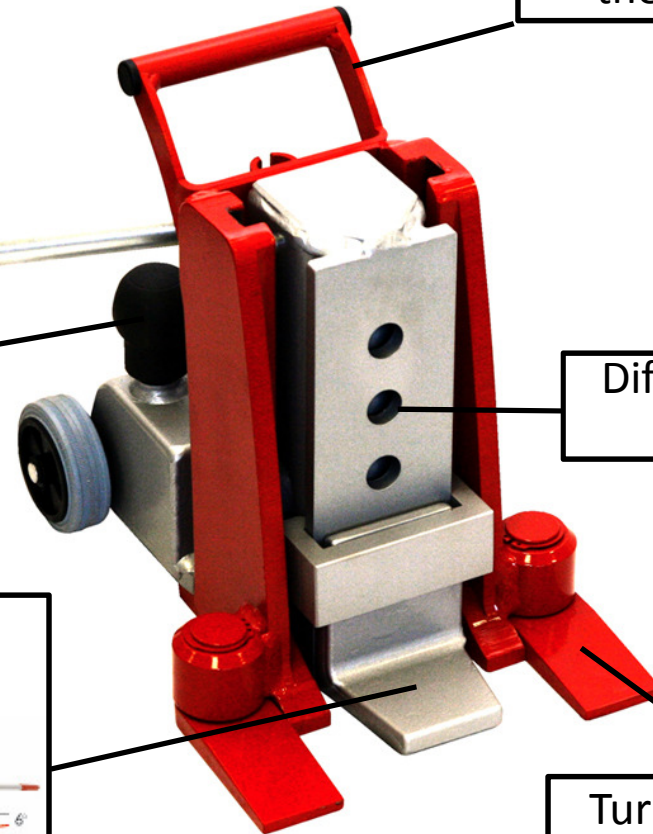

Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



G series


- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use




JH 5 G plus




JH 10 G plus

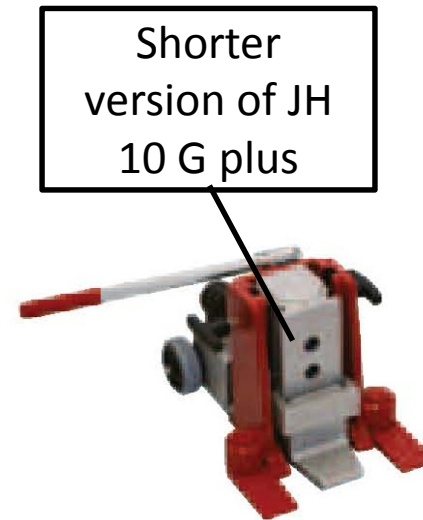

JH 10 G plus ku

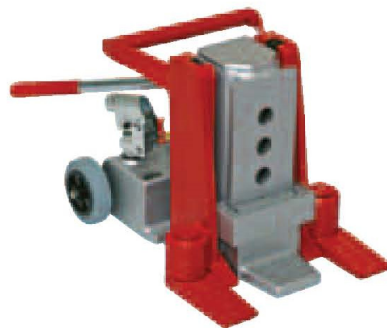


JH 15 G plus

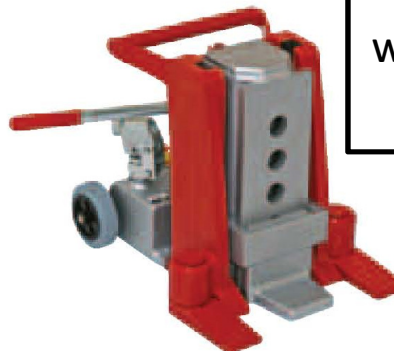

JH 20 G plus

Also available
without internal
pump unit

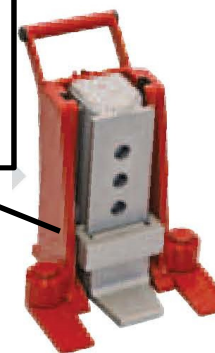

JH EX

S Series

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

180° Revolving
Slide for
use without
lifting feet



Load can be placed
on lifting toe, or on
the top plate



Also usable in
horizontal position
to push loads



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



S Series

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use



JHS 5



JHS 10



JHS 10 ku

Short version of JHS 10, provided with the swiveling toe



Products are also available as a set together with a pump and connection hoses, ready for use



JSET 10/2



JSET 20/3

JSET 20/3 ku



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE


T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



P Series

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

even balancing of load and ideal weight distribution through the twin cylinder system

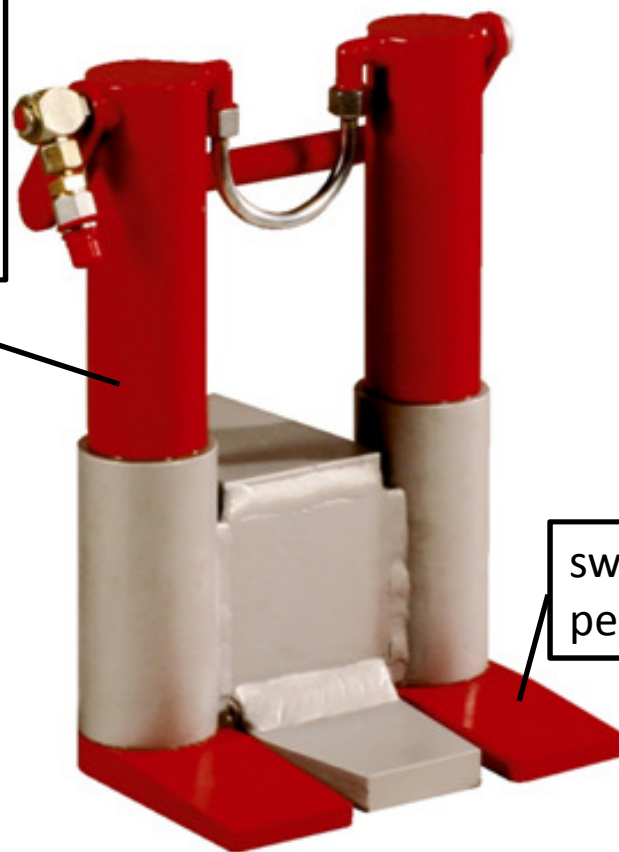

swivelling feet for perfect positioning



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



P Series

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use



JH 13 G



JH 30 G



JH 50 G



Products are also available as a set together with a pump and connection hoses, ready for use



JSET 13/2



JSET 30/2



JSET 50/3



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Transport Trolleys

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use



K Series
(3t, 6t, 9t, 12t)



G Series
(15t, 22t, 30t)

Revolving Trolley
(1t, 3t, 4t, 5t)



S Series
(18t, 24t)



H Series
(40t, 60t, 80t)



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu


41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Transport Trolleys

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

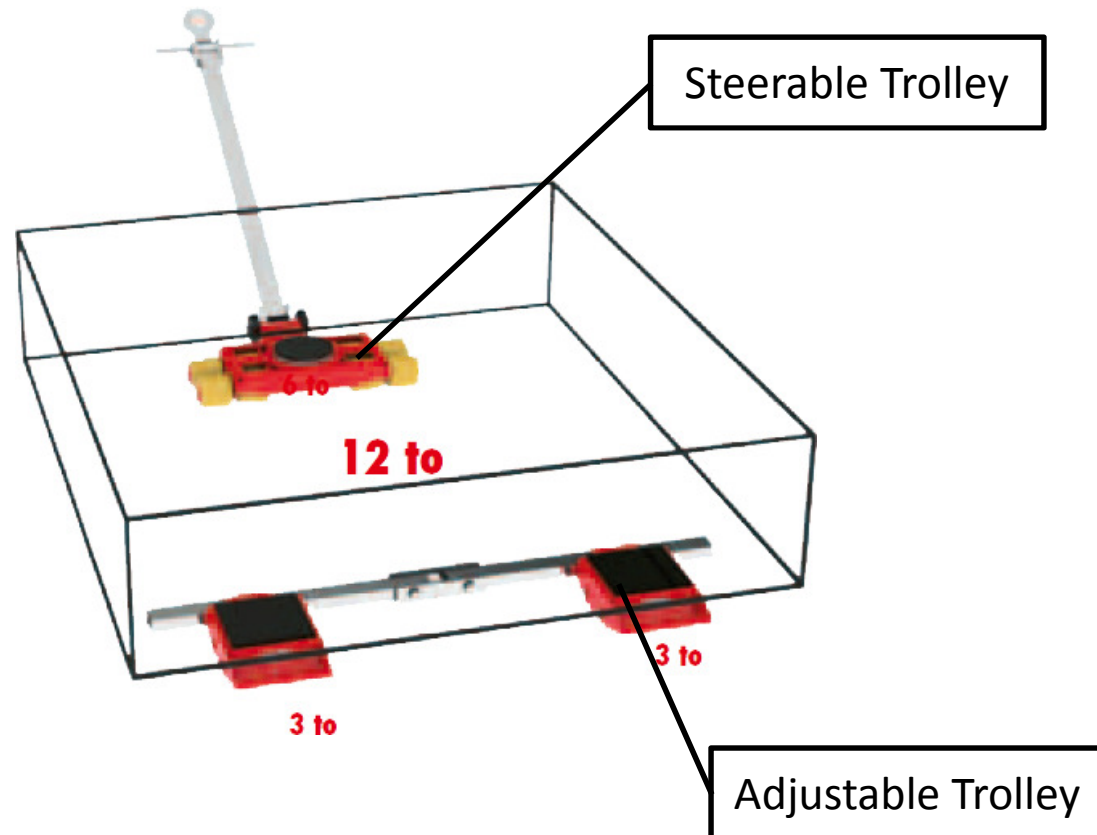

Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu




Steerable Trolley

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

360° rotating
turntable with heavy
duty ball bearings

Pivoting cassettes
on heavy models

Towing handle
Heavy load trolleys
have towing eye

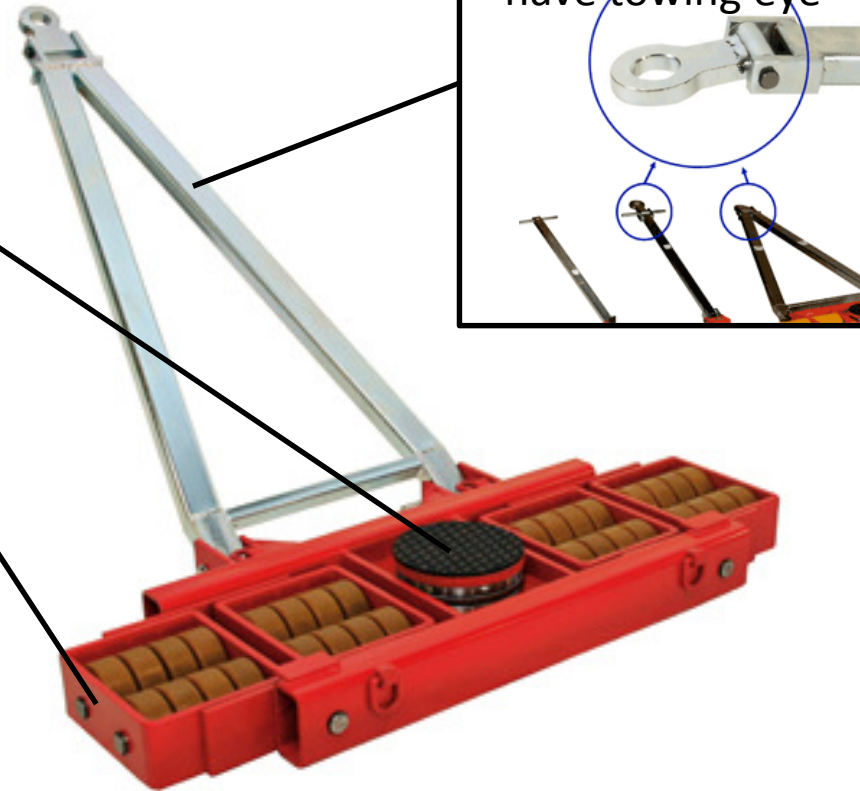

Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu


41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Adjustable Trolleys

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

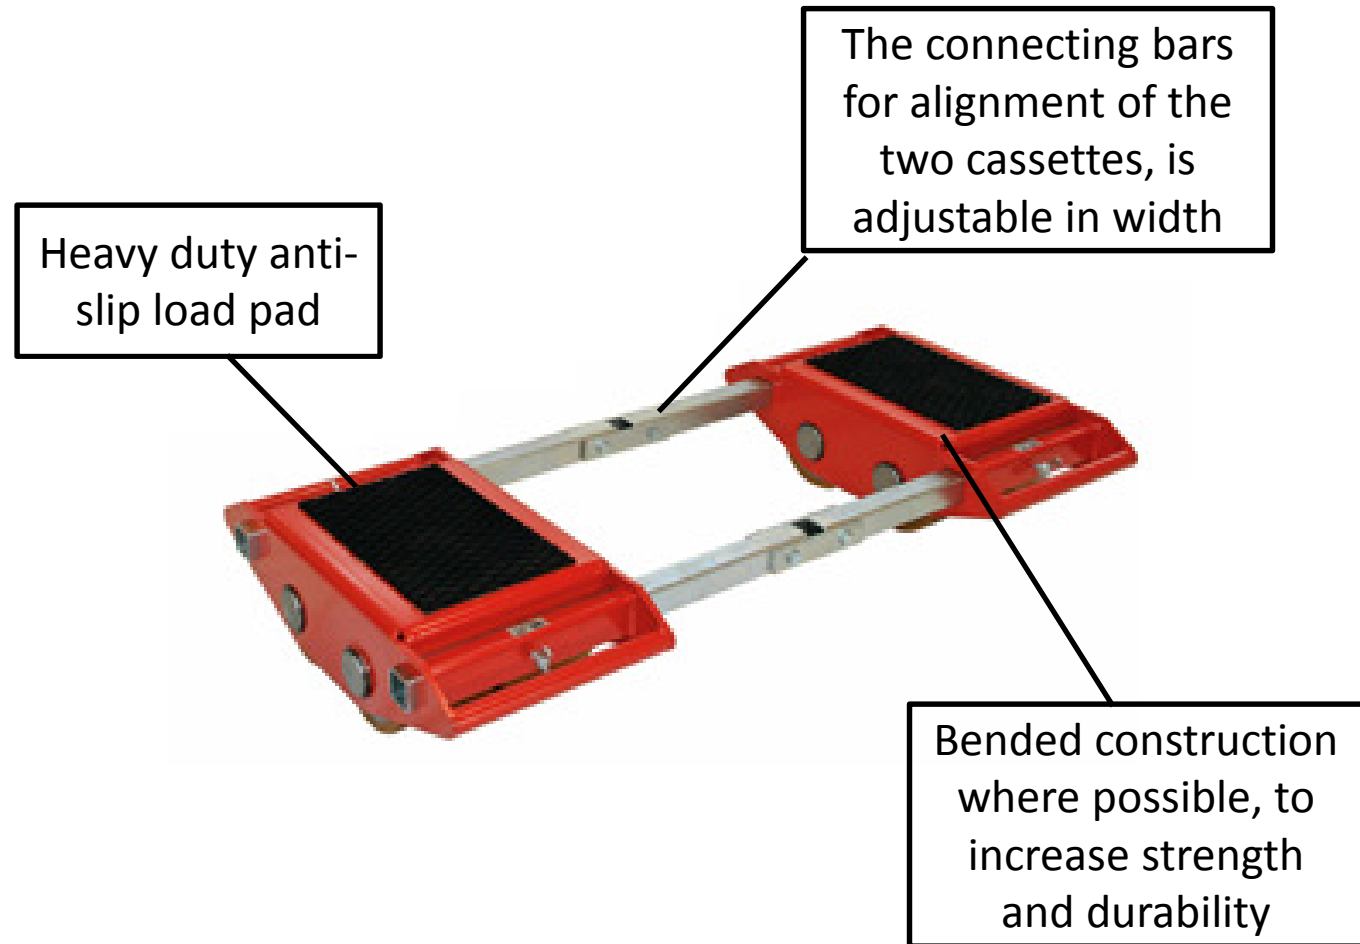

Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu


41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



The wheels

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

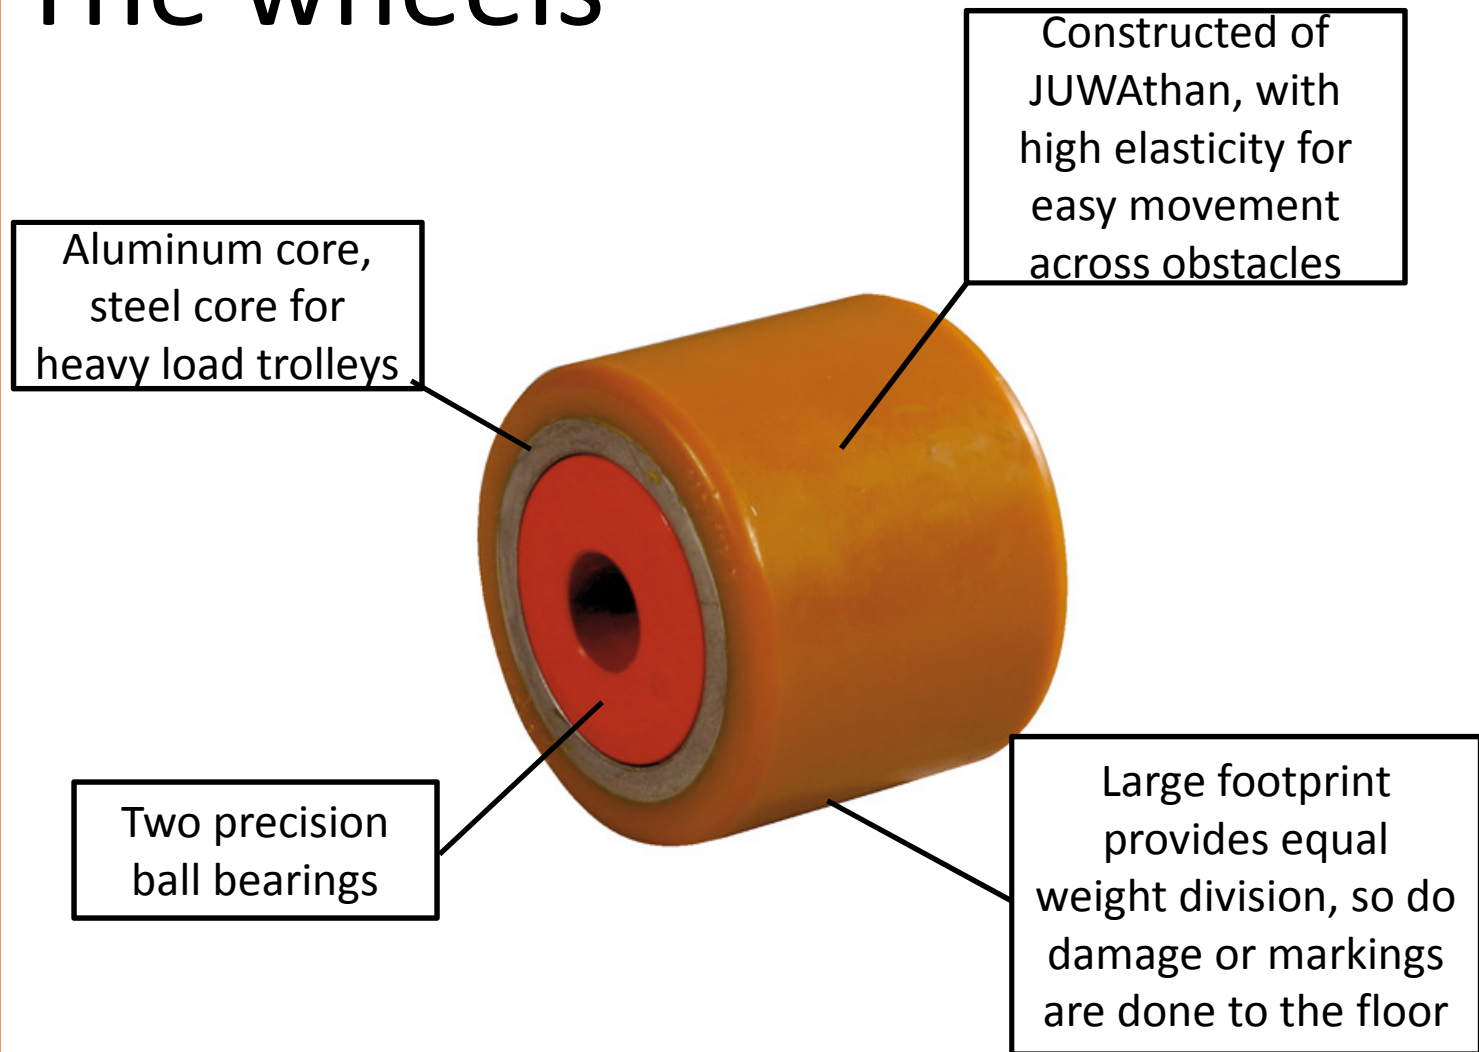

Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE


T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



Professional wheels

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

4 ball bearings
(higher load capacity)

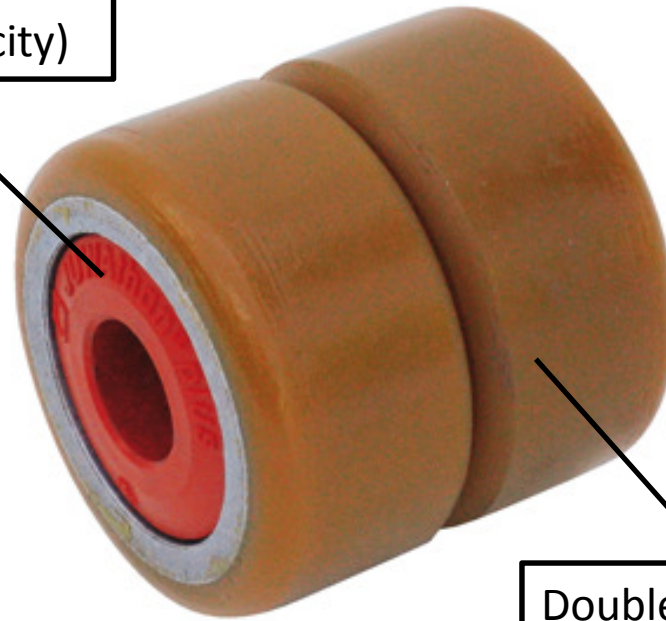

Double wheels rotating
independent for easier
steering



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu


41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu




How to use

- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

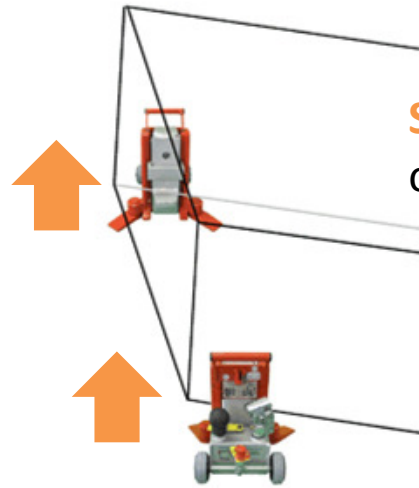

Step 1 : lift the load from one side with one jack, or with two or four jacks simultaneously.

Step 2: Slide the adjustable trolleys underneath and lower the load.

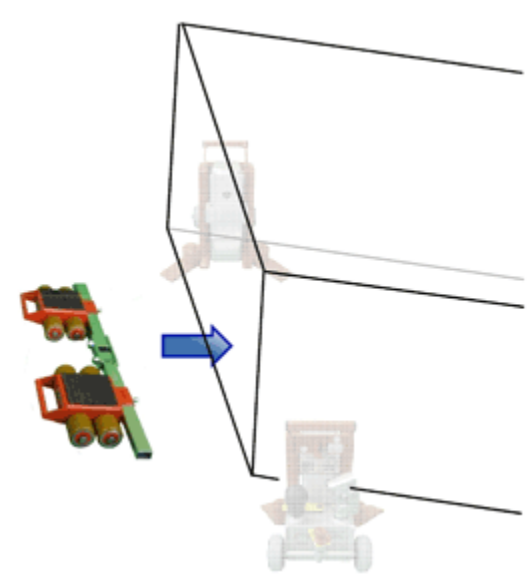

Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu


41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



How to use


- Company info
- JUNG, Where?
- Product catalog
 - Jacks
 - Trolleys
- How to use

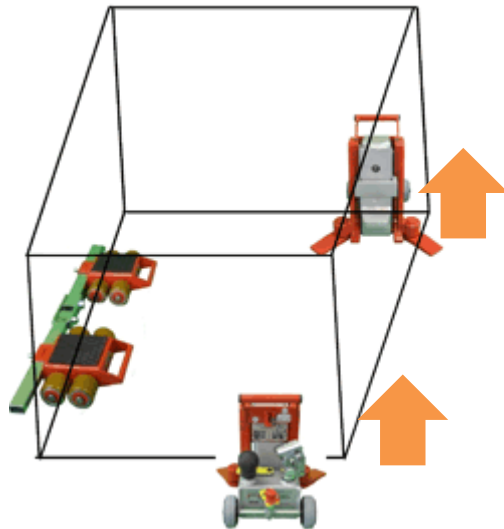

Step 3 : Now lift the other side of the load

Step 4: And slide the steerable trolley underneath

Step 5: Push the load with man or machine power

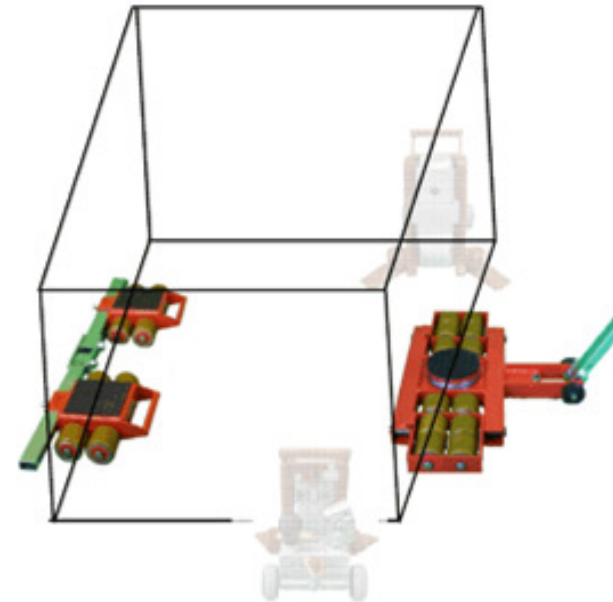

Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T:++30 2310 709155
F:++302310709 989
E:info@spatharas.eu



More questions?

Do not hesitate to contact us
++30 2310 709 155
info@spatharas.eu



Spatharas Alexandros Cranes and Machinery Spare Parts and Tires

www.spatharas.eu

41, Iasonidou str.
Kordelio | Thessaloniki
GR-56334 | GREECE

T: ++30 2310 709155
F: ++30 2310 709 989
E: info@spatharas.eu

